
4mm SECTION FOLDING BATH SCREEN GUIDE

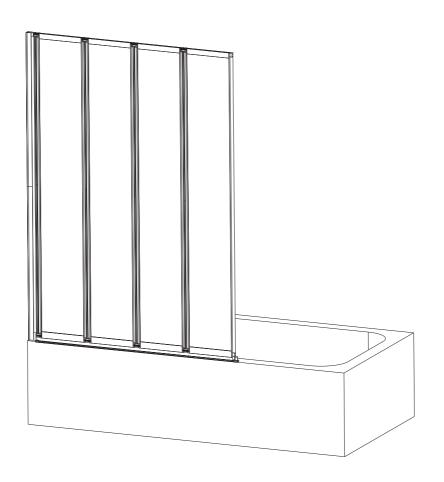

General Information

Please inspect this product upon delivery. Any missing parts or manufacturing defects must be reported immediately to the supplier. Damage or defects reported later will not be accepted. TAKE CARE WHEN HANDLING GLASS PARTS-AVOID HEAVY CONTACT BETWEEN THE GLASS EDGES AND ANY HARD SURFACE. Glass breakage claims will not be accepted after the product has been unpacked.


TOOLS REQUIRED

DESCRIPTION	PART IMAGE
Tape measure	
Spirit level	
Pencil	
Ø6mm Drill bit	
Ø3mm Drill bit	

DESCRIPTION	PART IMAGE
Drill	
Flat-head Screwdriver	
Cross head Screwdriver	PZ1
Mallet	
Silicone Sealant	


This product is heavy and may require two people to install.

ASSEMBLY INSTRUCTIONS - DRAWING

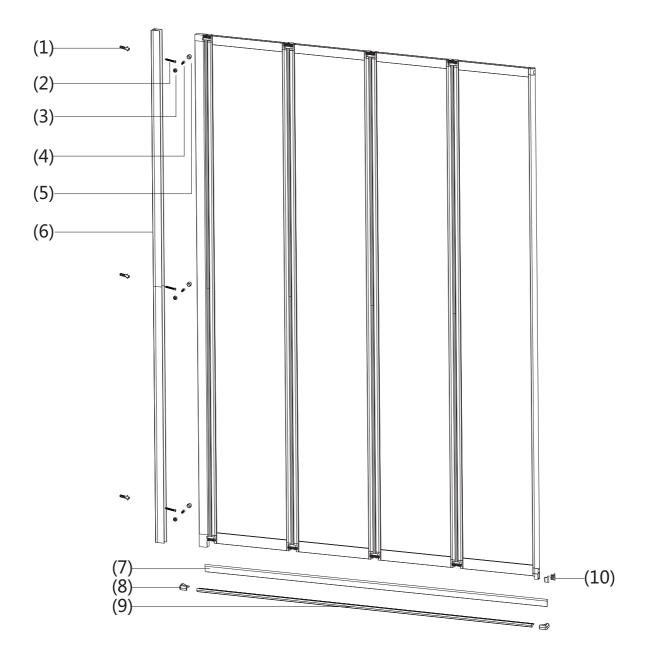


- (1) 3x Wall Plugs(2) 3x Screws 4x30
- (3) 3x Screw Clips
- (4) 3x Screws 4x12 (5) 3x Screw Cover Caps
- (6) 1x Wall Profile
- (7) 1x Bottom Seal
- (8) 2x Drip Strip End Caps L/R (9) 1x Drip Strip (10) 2x Bottom Cap L/R


Step 1 DRILLING WALL PROFILE TO THE WALL

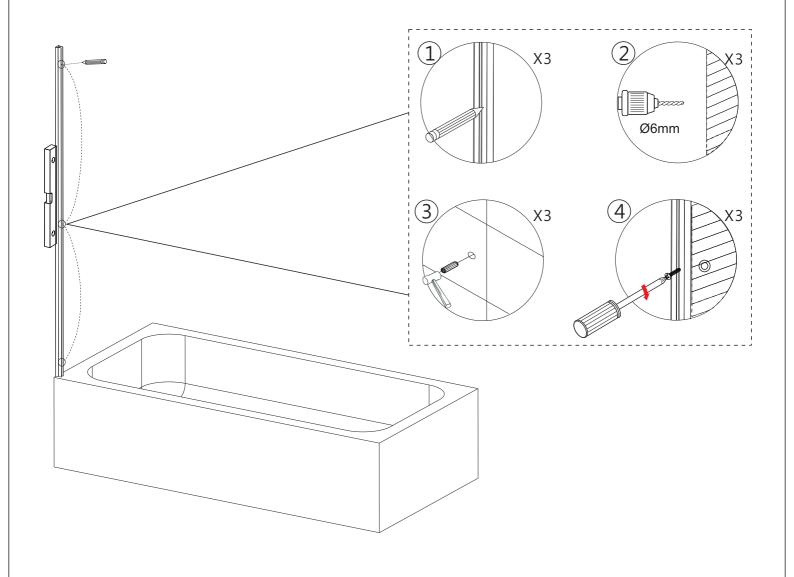


Step 2

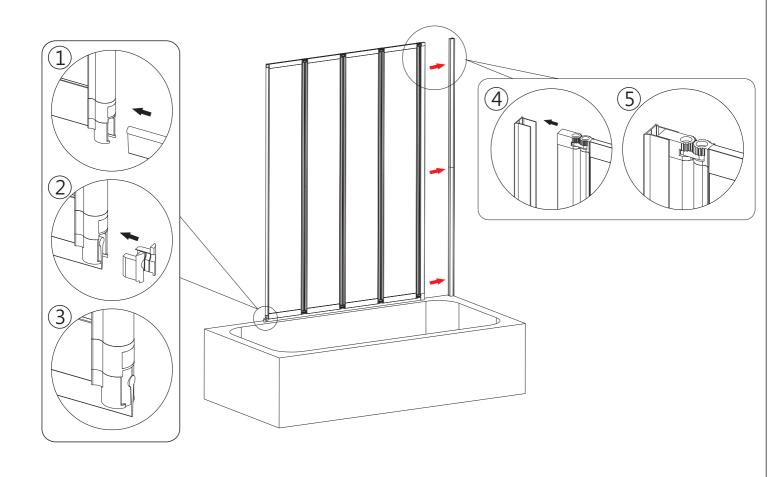


Step 3

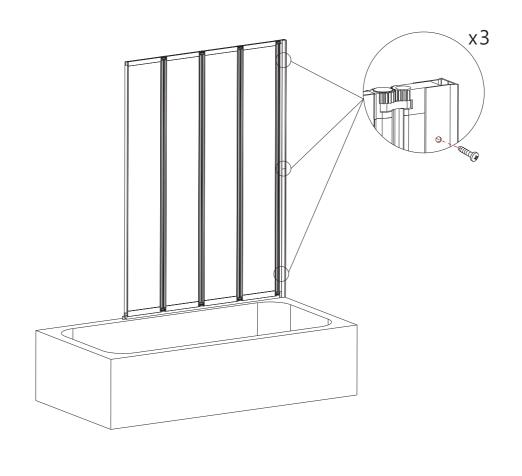

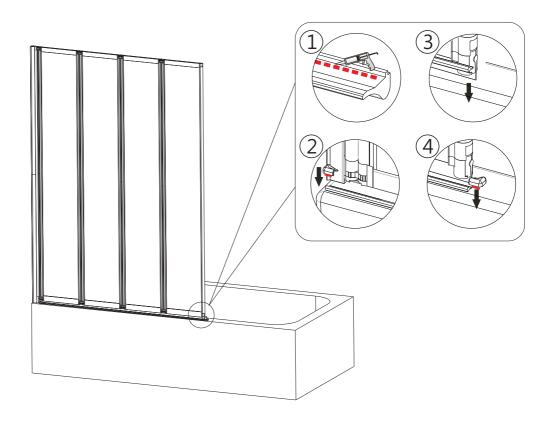

Step 5

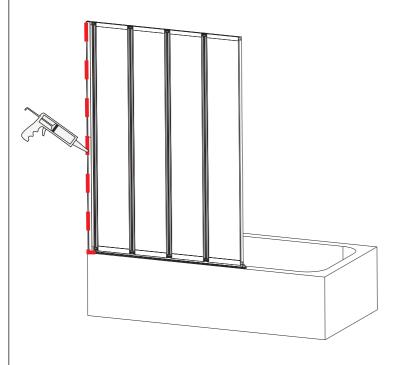



Allow 24 hours for silicone to dry before use. Silicone on the outside edge only, NOT THE INSIDE

Aftercare instructions

Regularly clean your shower product with warm soapy water to prevent lime scale build up. DO NOT use abrasive cleaning fluids or materials, or strong chemical cleaners as this will damage the product surface.

Check out our full range of Shower Enclosures

Quadrant Shower Enclosures

Corner Entry Shower Enclosures

Walk in Shower Enclosures

Sliding Shower Doors

Bifold Shower Doors

Pivot Shower Doors

Hinged Shower Doors

Shower Screens

From Top Brands

Coram Shower Enclosures

Mira Shower Enclosures

Hydrolux Shower Enclosures

Diamond Shower Enclosures

With quality shower trays to match your enclosure

Square Shower Trays

Rectangular Shower Trays

Quadrant Shower Trays

Coram Shower Trays

Mira Flight Shower Trays

