


90mm Shower Tray Waste Installation and Assembly Instructions

1. Remove upper assembly, and seals from the bottle trap.
2. Re-assemble on to the Shower Tray as shown in diagram below. The upper seal is optional to fit and if preferred, because of aesthetics, can be left out.
3. To clean the trap, remove the dome then twist and remove the inner section. Wipe clean, re-assemble and fit.


NB: A suitable quality silicone sealant should be used on all surfaces against the Shower Tray.

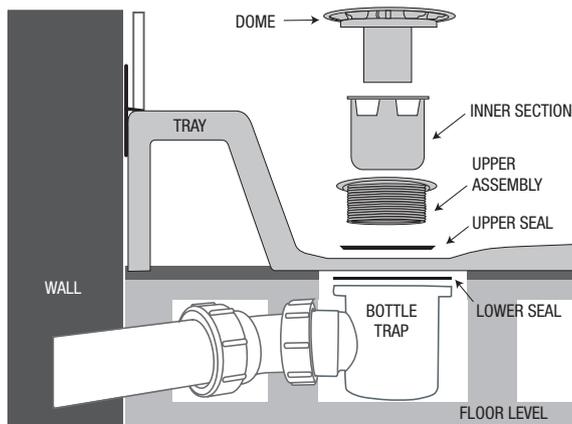

90mm Shower Tray Waste Installation and Assembly Instructions

1. Remove upper assembly, and seals from the bottle trap.
2. Re-assemble on to the Shower Tray as shown in diagram below. The upper seal is optional to fit and if preferred, because of aesthetics, can be left out.
3. To clean the trap, remove the dome then twist and remove the inner section. Wipe clean, re-assemble and fit.

NB: A suitable quality silicone sealant should be used on all surfaces against the Shower Tray.

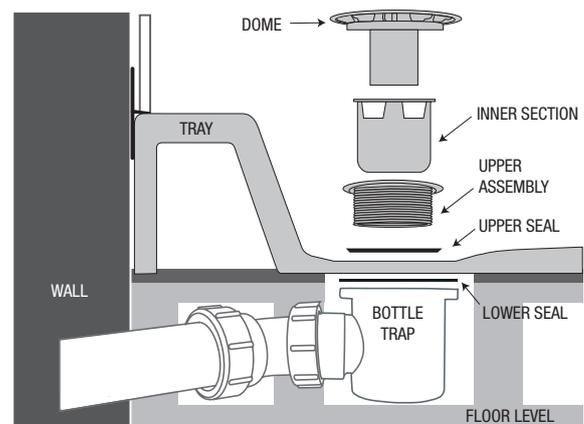

Check out our full range of Plumbing Supplies

Plumbing wastes / Plumbing traps

Plumbing Consumables

Plumbing Tools

Toilet Fittings

Brassware

Valves

Plumbing Fittings

plumbworld
Big brands, small prices.