


GENERAL BATH PANEL FIXING INSTRUCTIONS

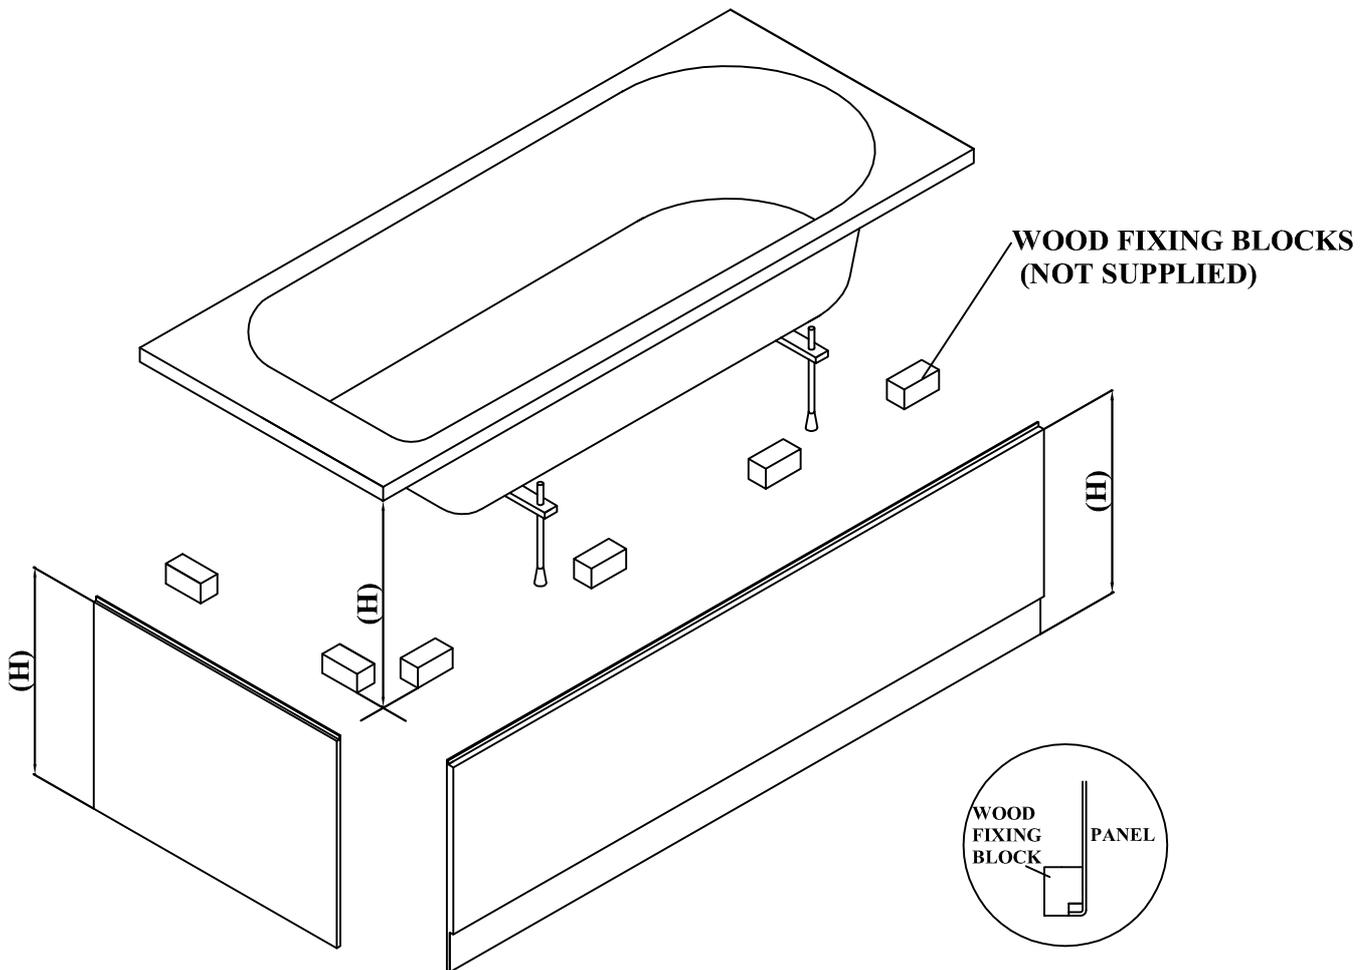

- 1. FIT THE BATH FEET AS PER THE MANUFACTURERS INSTRUCTION.**
- 2. MEASURE THE HEIGHT OF THE PANEL, THEN SET THE BATH TO THIS HEIGHT BY MEASURING FROM THE UNDERSIDE OF THE BATH RIM TO THE FLOOR (H) AND LEVEL BY USING THE ADJUSTABLE FEET.**
- 3. MAKING SURE THE PANEL IS PLUMB MARK THE POSITION ON THE FLOOR FOR THE WOODEN BLOCKS AND FIX ACCORDINGLY.**
- 4. IF THE PANEL NEEDS SUPPORT AT THE TOP UNDER THE BATH RIM, THEN WOODEN BLOCKS CAN BE FIXED TO THE UNDERSIDE OF THE BATH USING A NO NAILS TYPE CEMENT.**
- 5. ADDITIONAL SUPPORT BATTENS CAN FIXED TO THE WALL SIDE IF REQUIRED.**
- 6. THE PANELS CAN THEN BE SECURED TO THE FIXING BLOCKS BY USING MIRROR SCREWS OR VELCRO.**

Check out our full range of Bathroom Suites

Bathroom Suites By Range

Cloakroom Suites

Toilets

Bathroom Sinks / Wash Basins

Bidets

Baths

Wide variety of toilets

Close Coupled Toilets

Wall Hung Toilets

Back To Wall Toilets

Furniture unit toilets

Huge Selection of Baths

Acrylic Baths

Steel Baths

Shower baths

Freestanding baths

Small baths

Corner baths

Whirlpool baths

Don't forget the important bathroom suite extras

Bath panels

Toilet seats

plumbworld
Big brands, small prices.