




INSTALLATION OF 2 IN 1 WC & BASIN

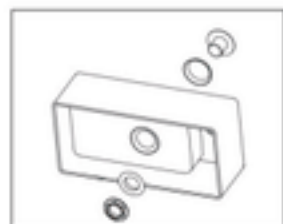


Step 1: Place and fix the waste and washer.

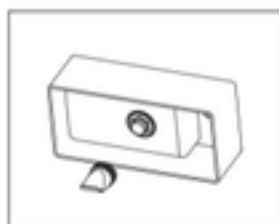

Step 2: Fit the Silicone sleeve on the bottom of the waste.

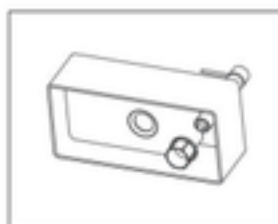


Step 3: Place the tap and tightly screw the fixing nut.

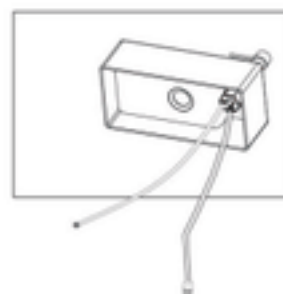

Step 4: Connect hot & cold water hose to the tap and connect the other end to outlet of the cistern.



INSTALLATION OF WASH BASIN

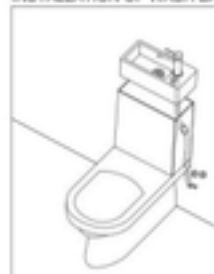

Note: During installation, please ensure there is enough distance between the float of the inlet valve and the hoses, make sure there is no resistance to the normal operation of the inlet valve.

Combi De-luxe



POT955CM

Basin waste installation instruction



1, Fixed with one of flexi pipe




2, Fixed fix 2nd pipe with the film and lap at the bottom



3, Tighten the lap and back nut



4, Tighten the cover

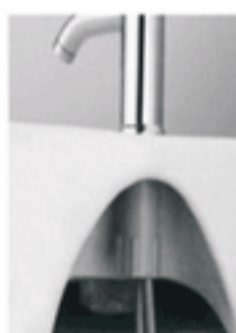

5, Finished



1, Fixed the film first and put in the hole



2, Fixed another film at the bottom



3, Tighten the screw and finished



1:1



Check out our full range of Bathroom Suites

Bathroom Suites By Range

Cloakroom Suites

Toilets

Bathroom Sinks / Wash Basins

Bidets

Baths

Wide variety of toilets

Close Coupled Toilets

Wall Hung Toilets

Back To Wall Toilets

Furniture unit toilets

Huge Selection of Baths

Acrylic Baths

Steel Baths

Shower baths

Freestanding baths

Small baths

Corner baths

Whirlpool baths

Don't forget the important bathroom suite extras

Bath panels

Toilet seats

plumbworld
Big brands, small prices.